


Step 1
 Attach the back leg, seat and back together by using
 (2) 2½" chair bolts.

Step 2
 Attach the footrest assembly using (4) 1¾" chair bolts.

- (1) Chair
- (1) Footrest
- (1) Hardware pack

Tools Needed
 4mm HEX KEY: INCLUDED

Qty.	Description
4	A - 1¾" Chair Bolt
2	B - 2½" Chair Bolt

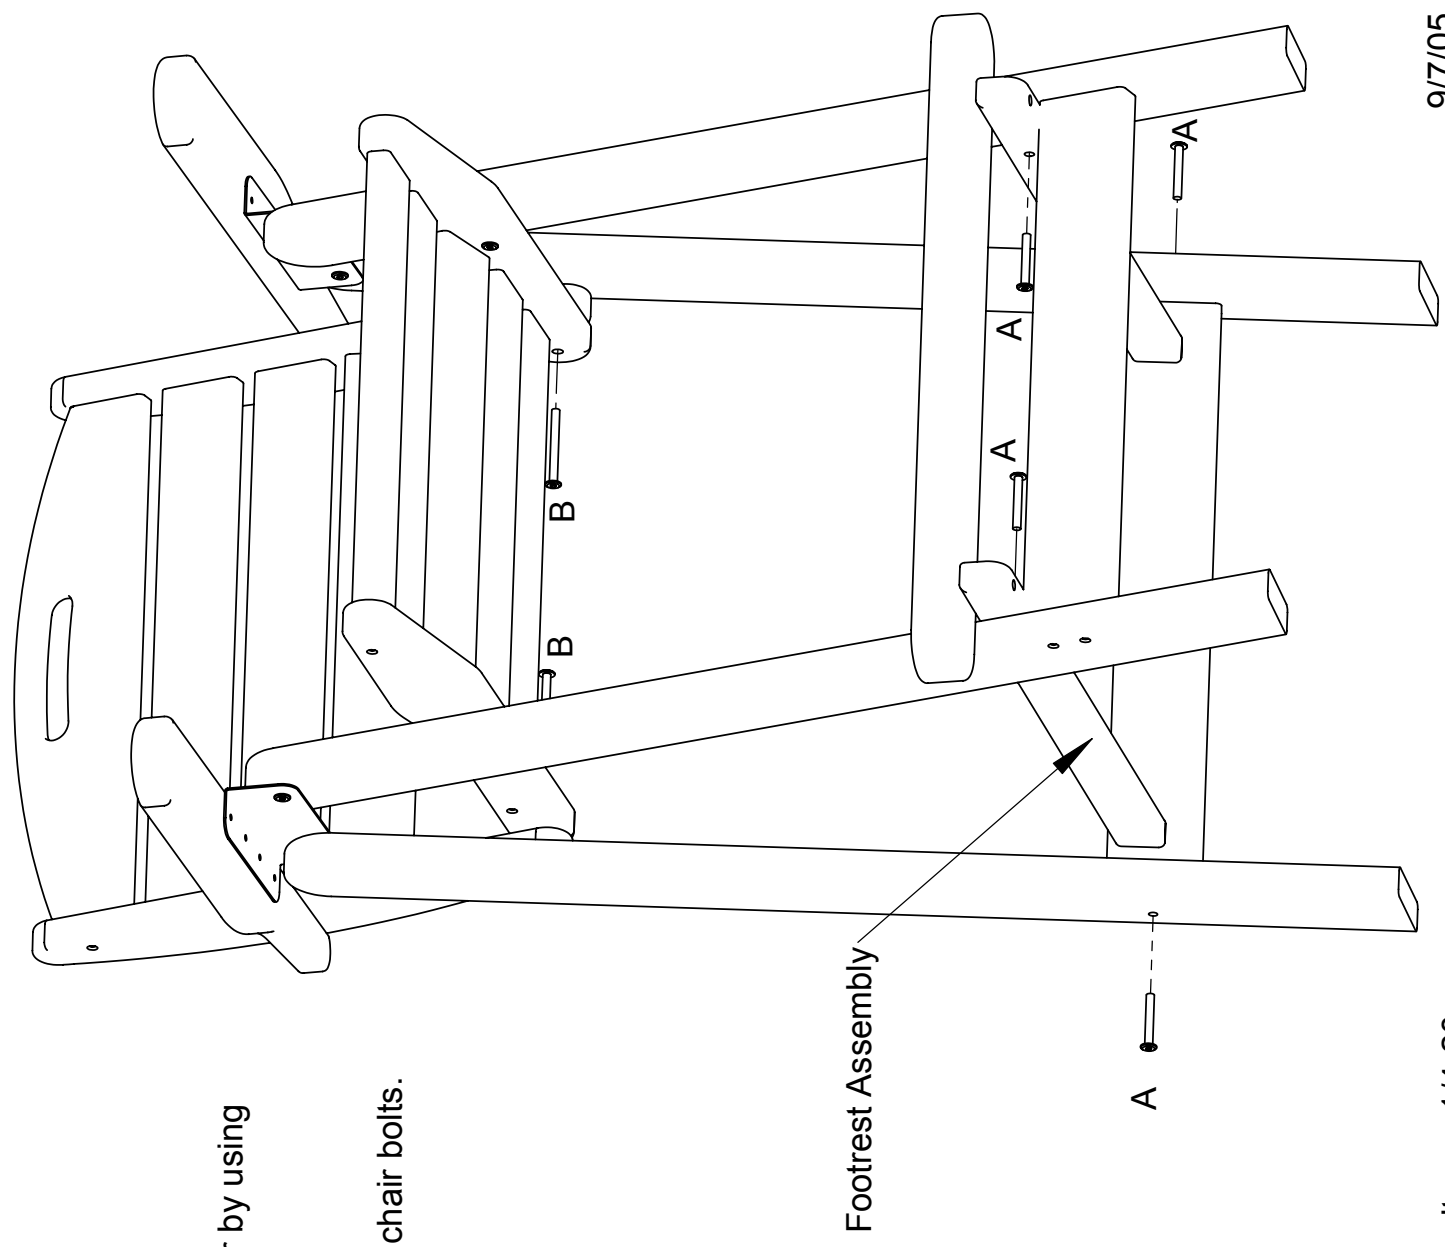

All bolts are 1/4-20