

Step 1

Attach the seat to the sideframes using (6) 1½" bolts - Do not tighten bolts yet

Step 2

Attach the back assembly *bottom* to the seat using (2) 1½" bolts

Then attach the back assembly *top* to the sideframes using (2) 3¼" bolts

Step 3


Attach the back assembly to the seat support using (1) 2½" bolt

* Tighten all bolts at this time

- (2) Sideframes
- (1) Seat
- (1) Back
- (1) Hardware pack

TOOLS NEEDED:

Phillips head screw driver or
4mm Hex key: Included

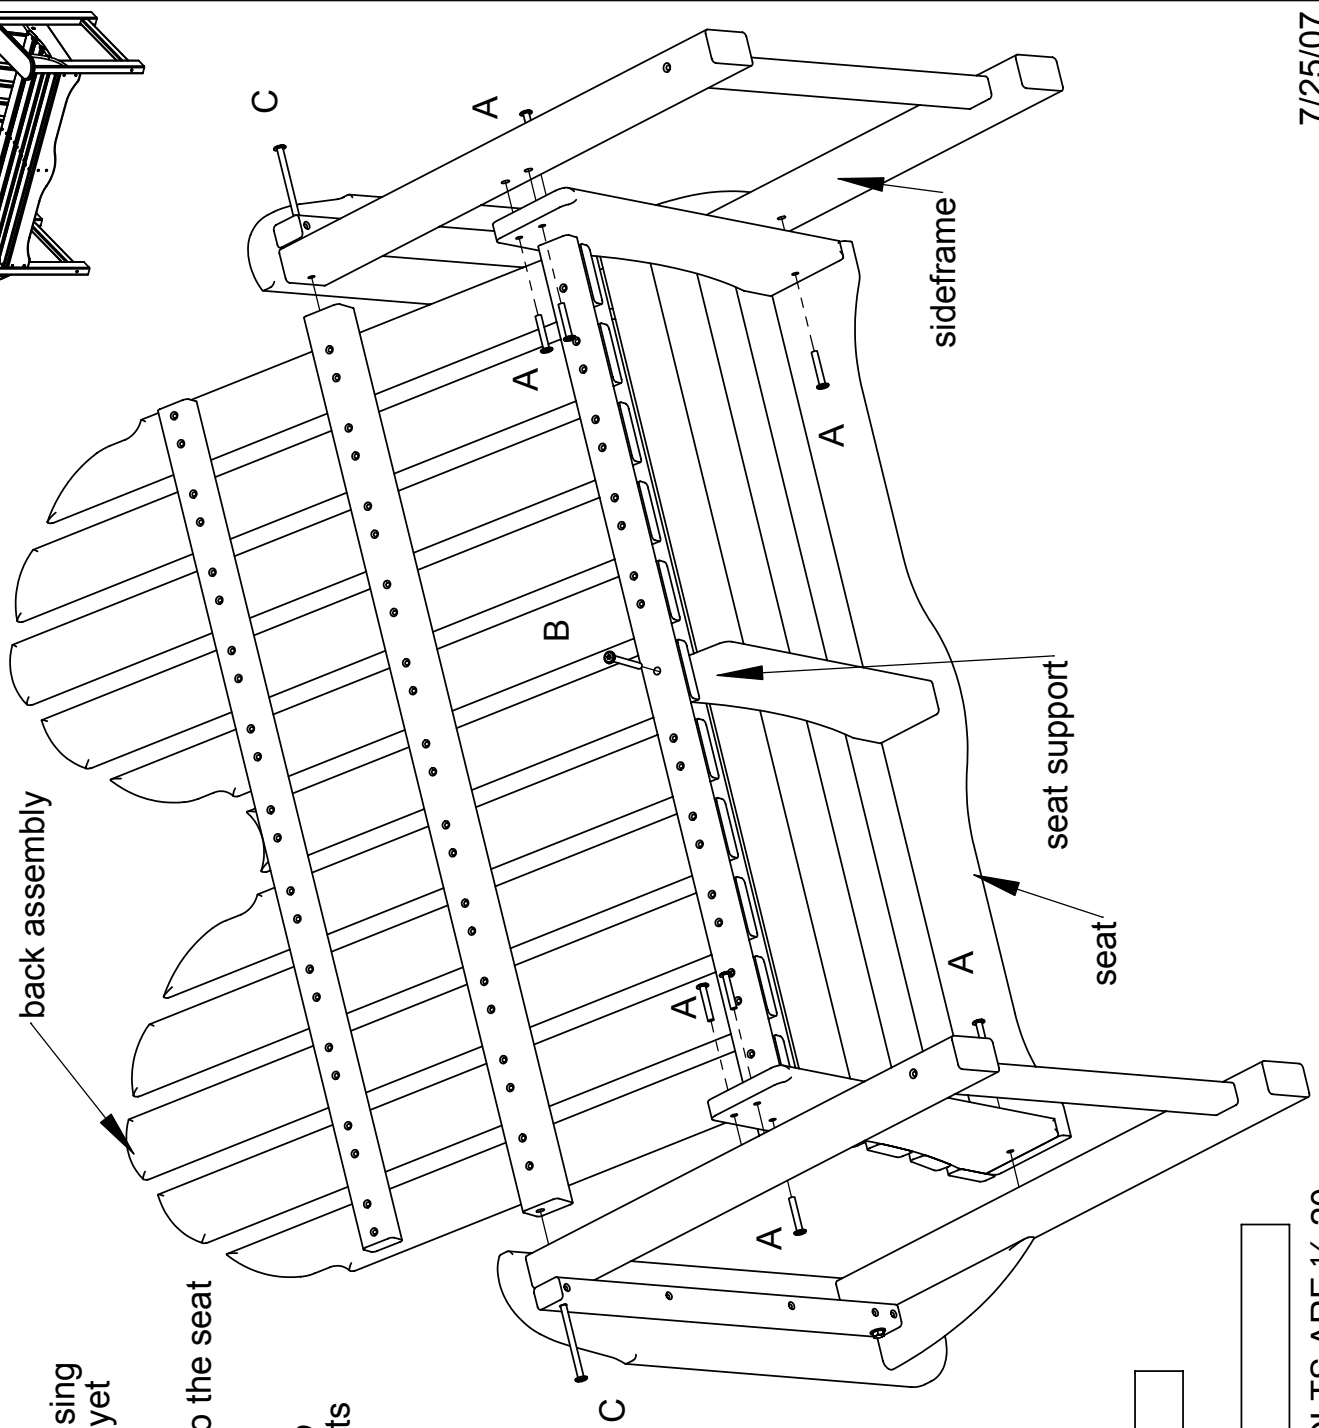

Qty.	Description
8	A - 1½" Bolt
1	B - 2½" Bolt
2	C - 3¼" Bolt

ALL BOLTS ARE ¼-20